


What you'll need

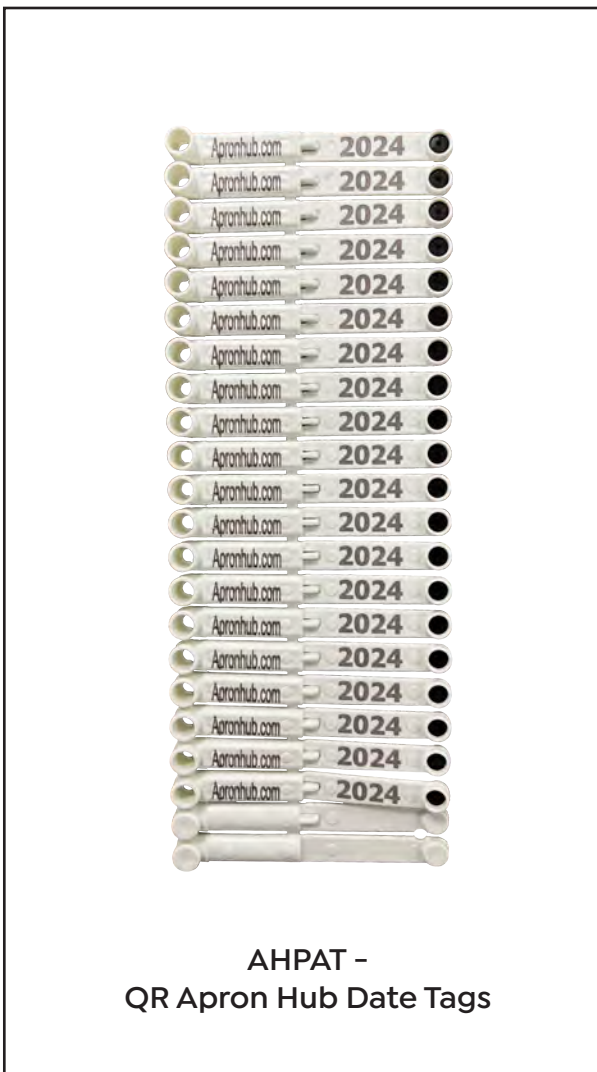

Step 1

Punch hole no bigger than
3/4" into apron.



3/4"

Step 2

Twist tag off APHAT.

Step 3

Bend the twisted off APHAT tag and
insert into AHPATTOOL with back of
pointed end aligned to pink side of
AHPATTOOL.

Step 4

Align point of APHAT with punched
hole and squeeze AHPATTOOL.